



INTELLIGENT SMART COOKER
เตาอัจฉริยะ รุ่น ISC-G1







INTELLIGENT SMART COOKER
เตาอัจฉริยะ รุ่น ISC-G1



ให้คุณสนุกไปกับการทำอาหาร
อย่างปลอดภัย



รายชื่อชิ้นส่วนต่างๆ และปุ่มใช้งานแผงควบคุม

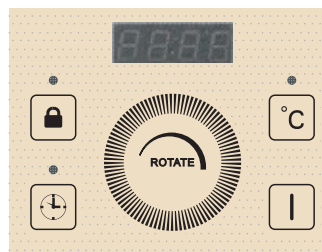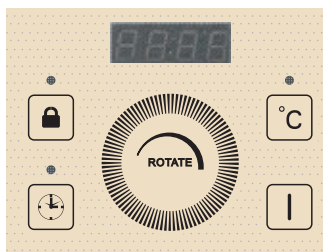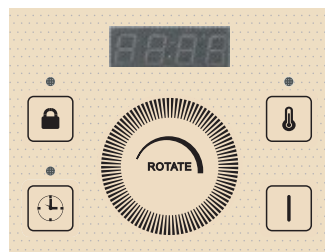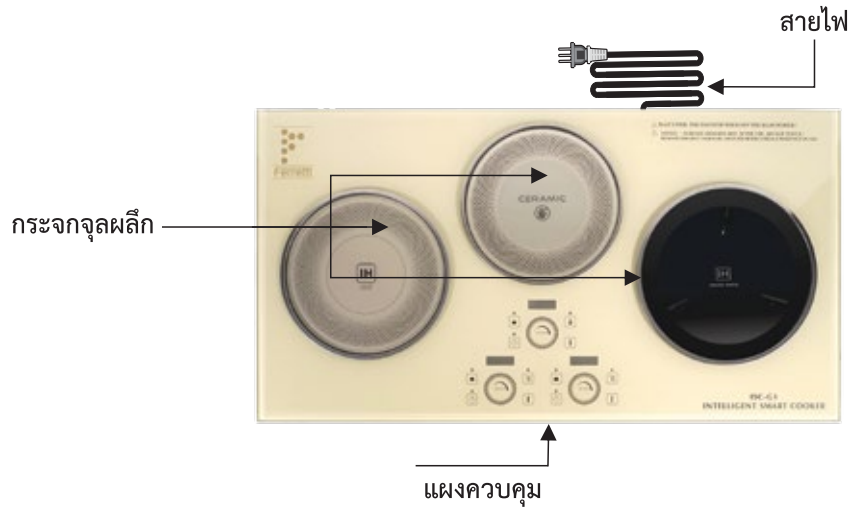

คำแนะนำ :

1. กำลังไฟทั้งหมดของเตาด้านซ้าย ด้านขวา และตัวทำความร้อนเซรามิกไฟฟ้า เท่ากับ 3,400 วัตต์
2. ในขณะที่เตาด้านซ้ายและเตาด้านขวาทำงานพร้อมกัน ตัวทำความร้อนเซรามิกไฟฟ้าจะตัดโดยอัตโนมัติ และกำลังไฟทั้งหมดของเตาด้านซ้ายและขวาจะเท่ากับ 3,400 วัตต์
3. ในขณะที่เตาด้านซ้ายและตัวทำความร้อนเซรามิกไฟฟ้าทำงานพร้อมกัน เตาด้านขวาจะตัดโดยอัตโนมัติ กำลังไฟของเตาด้านซ้ายสามารถปรับได้จาก 100 วัตต์ ถึง 2,000 วัตต์ หรืออุณหภูมิสามารถปรับได้จาก 80 องศาเซลเซียส ถึง 240 องศาเซลเซียส ในขณะเดียวกัน กำลังไฟของตัวทำความร้อนเซรามิกไฟฟ้าสามารถปรับได้จาก 100 วัตต์ ถึง 1,400 วัตต์ กำลังไฟสูงสุดของเตาด้านซ้ายและตัวทำความร้อนเซรามิกไฟฟ้าเท่ากับ 3,400 วัตต์
4. ในขณะที่เตาด้านขวาและตัวทำความร้อนเซรามิกไฟฟ้าทำงานพร้อมกัน เตาด้านซ้ายจะตัดโดยอัตโนมัติ กำลังไฟของเตาด้านขวาสามารถปรับได้จาก 100 วัตต์ ถึง 2,000 วัตต์ หรืออุณหภูมิสามารถปรับได้จาก 80 องศาเซลเซียส ถึง 240 องศาเซลเซียส ในขณะเดียวกัน กำลังไฟของตัวทำความร้อนเซรามิกไฟฟ้าสามารถปรับได้จาก 100 วัตต์ ถึง 1,400 วัตต์ กำลังไฟสูงสุดของเตาด้านขวาและตัวทำความร้อนเซรามิกไฟฟ้าเท่ากับ 3,400 วัตต์

หมายเหตุ: เตามแม่เหล็กไฟฟ้าแบบสามเตา สามารถใช้เตาพร้อมกันได้เพียงสองเตาเท่านั้น (โดยกำลังไฟทั้งหมดไม่สามารถเกิน 3,400 วัตต์)

ลักษณะที่เหมาะสม :

1. หม้อและกระทะกันแม่เหล็ก สแตนเลสกันเหล็ก เหล็กหล่อและเคลือบ
2. หม้อและกระทะกันแบน ที่มีเส้นผ่านศูนย์กลางระหว่าง 12 ถึง 26 เซนติเมตร
3. น้ำหนักสูงสุดของหม้อหรือกระทะไม่เกิน 6 กิโลกรัม

การทำงานของแผงควบคุม :



หลังจากเสียบปลั๊ก ให้เลือกการทำงานในรูปแบบที่เหมาะสม โดยสามารถปรับกำลังไฟ อุณหภูมิ และเวลาโดยการหมุนปุ่มควบคุม



หลังจากเสียบปลั๊ก ให้กดปุ่ม “เปิด/ปิด” เป็นเวลา 1 วินาที จะมีเสียงบี๊บและหน้าจอดิจิทัลแสดงตัวเลข “00” (จะดับโดยอัตโนมัติหากไม่มีการใช้งานเกิน 1 นาที) ให้กดเลือกการใช้งานความร้อน



หลังจากเสียบปลั๊ก ให้กดปุ่ม “เปิด/ปิด” เป็นเวลา 1 วินาที จะมีเสียงบี๊บและหน้าจอดิจิทัลแสดงตัวเลข “00” (จะดับโดยอัตโนมัติหากไม่มีการใช้งานเกิน 1 นาที) เมื่อกดปุ่มนี้ ตัวบอกอุณหภูมิจะสว่างขึ้นและหน้าจอดิจิทัลแสดงตัวเลข “180°C” และเข้าสู่โหมดการทำงานแบบความร้อนอุณหภูมิคงที่ หมุนปุ่มควบคุมจากอุณหภูมิ 80-240 องศาเซลเซียส ตามเข็มนาฬิกาเพื่อปรับอุณหภูมิ และหมุนทวนเข็มนาฬิกาเพื่อปรับจาก 240 องศาเซลเซียส ไปยัง 80 องศาเซลเซียส เมื่อกดปุ่มนี้อีกครั้ง หน้าจอดิจิทัลจะแสดงกำลังไฟ “1200” จากนั้นให้หมุนปุ่มควบคุมตามเข็มนาฬิกาเพื่อปรับกำลังไฟจาก 100 วัตต์ ไปถึง 2,000 วัตต์ และหมุนทวนเข็มนาฬิกาเพื่อปรับจาก 2,000 วัตต์ไปยัง 100 วัตต์ ปุ่มนี้สามารถเปลี่ยนโหมดการทำงานไปเป็นแบบความร้อนอุณหภูมิคงที่ในขณะที่เปิดเครื่อง



กดปุ่มนี้ในขณะที่ทำความร้อน ตัวบอกเวลาจะสว่างขึ้นและหน้าจอดิจิทัลแสดงตัวเลข “0:00” จากนั้นหมุนปุ่มควบคุมเพื่อปรับเวลาจาก 1 นาที ไปถึง 8 ชั่วโมง การหมุนตามเข็มนาฬิกาเป็นการปรับเพิ่มเวลา (จาก 1 ถึง 59 นาที ในแต่ละการปรับจะเพิ่มขึ้น 1 นาที จาก 1 ถึง 8 ชั่วโมง ในแต่ละการปรับจะเพิ่มขึ้น 10 นาที) การหมุนทวนเข็มนาฬิกาเป็นการปรับลดเวลา (จาก 1 นาที ถึง 1 ชั่วโมง ในแต่ละการปรับจะลดลง 1 นาที จาก 1 ถึง 8 ชั่วโมง ในแต่ละการปรับจะลดลง 10 นาที เมื่อหน้าจอดิจิทัลแสดงตัวเลข “0:00” การหมุนทวนเข็มนาฬิกาจะลดลง 8 ชั่วโมง)




หลังจากเสียบปลั๊ก ให้กดปุ่มนี้เป็นเวลา 2 วินาที ตัวแสดงล็อกเด็กจะสว่างขึ้นและอยู่ในโหมดการทำงานแบบล็อกเด็ก ภายใต้การทำงานแบบล็อกเด็ก ให้กดปุ่มนี้เป็นเวลา 2 วินาที เพื่อปลดล็อก โดยจะปิดภายใต้การทำงานแบบล็อกเด็กเท่านั้น หากต้องการใช้งานโหมดการทำงานรูปแบบอื่น กรุณาปลดล็อก



หลังจากเสียบปลั๊ก ให้กดปุ่ม “เปิด/ปิด” เป็นเวลา 1 วินาที จะมีเสียงบี๊บและหน้าจอดิจิทัลแสดงตัวเลข “00” (จะดับโดยอัตโนมัติหากไม่มีการใช้งานเกิน 1 นาที) เมื่อกดปุ่มนี้ ตัวแสดงจะสว่างขึ้นและหน้าจอดิจิทัลแสดง “PC” และเข้าสู่โหมดการทำงานแบบรักษาความร้อน เมื่อกดปุ่มอีกครั้ง หน้าจอดิจิทัลแสดง “800” หมุนปุ่มควบคุมจาก 100 วัตต์ ไปถึง 1,400 วัตต์ ตามเข็มนาฬิกาเพื่อปรับกำลังไฟ และหมุนทวนเข็มนาฬิกาเพื่อปรับจาก 1,400 วัตต์ ไปยัง 100 วัตต์ ปุ่มนี้สามารถเปลี่ยนโหมดการทำงานไปเป็นแบบรักษาความร้อน ในขณะที่เปิดเครื่อง

ข้อแนะนำ: เมื่อหน้าจอดิจิทัลแสดง “:” เครื่องยังมีความร้อน ถึงแม้เครื่องปิด หากหน้าจอดิจิทัลแสดง “H” อุณหภูมิพื้นผิวเครื่องสูงกว่า 70 องศาเซลเซียส กรุณาหลีกเลี่ยงการสัมผัสและระมัดระวังการเผาไหม้

หมายเหตุ :

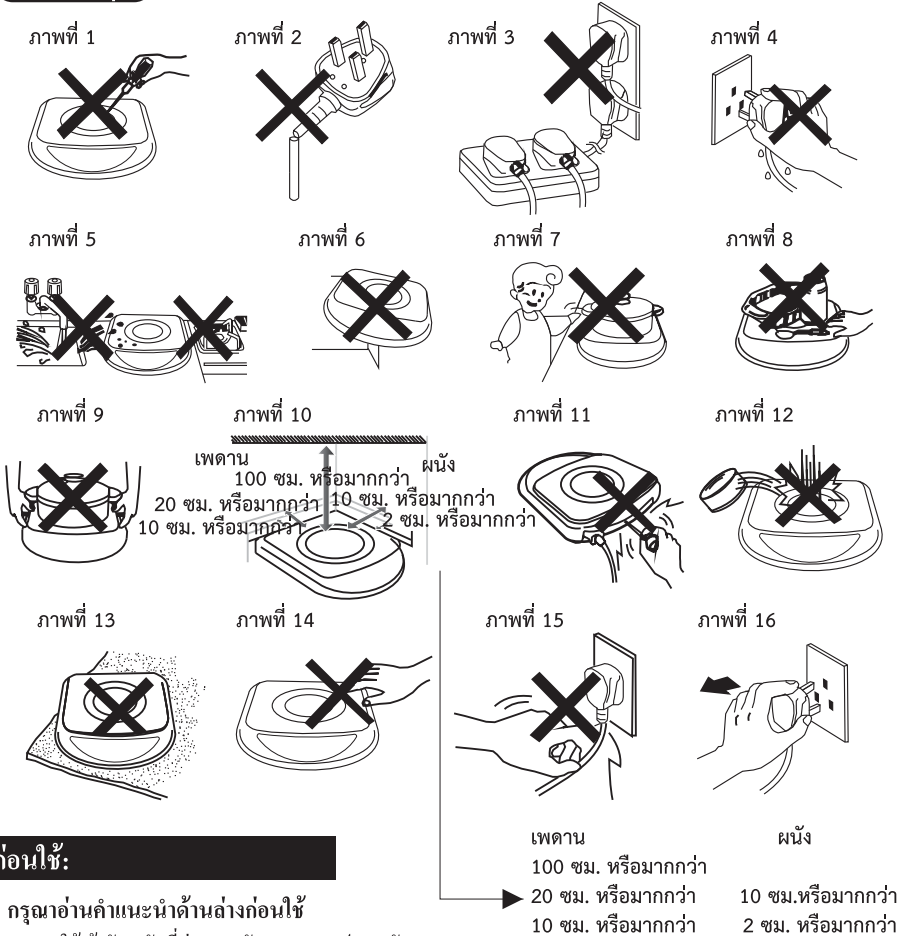

ก่อนใช้:

กรุณาอ่านคำแนะนำด้านล่างก่อนใช้

1. ควรใช้เตารับหลักที่ผ่านการรับรองความปลอดภัย ตรวจสอบเตาเป็นประจำเพื่อป้องกันความเสียหาย
2. (ภาพที่ 1) ซ่อมแซมโดยช่างผู้เชี่ยวชาญและไม่เปิดฝาคอร์ด้วยตัวเอง
3. (ภาพที่ 2) ตรวจสอบสายและปลั๊กไฟว่ามีความเสียหายหรือไม่ หากมีโปรดอย่าใช้งาน
4. (ภาพที่ 3) อย่าใช้สายไฟต่อ ใช้แต่เตาหลักเท่านั้นเนื่องจากเครื่องต้องการกำลังไฟสูง
5. (ภาพที่ 4) ในกรณีที่เครื่องไม่มีการใช้งานเป็นเวลานาน ให้เปิดเครื่องทิ้งไว้ 10 นาที เพื่อให้ชิ้นส่วนอิเล็กทรอนิกส์ต่างๆ เสถียร หลังจากทำการอุ่นเครื่องเป็นเวลา 10 นาที จึงสามารถเริ่มการใช้งานได้ อย่าใช้มือเปียกกดปลั๊ก
6. (ภาพที่ 5) อย่าใช้เครื่องใกล้กับน้ำ ไฟ หรือบริเวณที่มีความชื้น อุปกรณ์ชิ้นนี้ได้รับการออกแบบให้ใช้ภายในเท่านั้น ไม่ควรใช้ภายนอกหรือกลางแจ้ง

ในระหว่างการใช้งาน:


กรุณาอ่านคำแนะนำด้านล่างเพื่อหลีกเลี่ยงอันตรายที่อาจเกิดขึ้น

1. (ภาพที่ 6) วางเครื่องบนพื้นราบที่มีพื้นผิวแข็ง
2. (ภาพที่ 7) เก็บเครื่องให้พ้นจากมือเด็ก บริเวณแผ่นทำความร้อนเซรามิกไฟฟ้าและแผ่นด้านบนอื่นๆ อาจร้อนมาก
3. (ภาพที่ 8) อย่าวางวัตถุเหล่านี้บนแผ่นด้านบน ในขณะที่เครื่องกำลังทำงาน เนื่องจากก่อให้เกิดความร้อน
 - ก) สแตนเลส
 - ข) เหล็ก
 - ค) เหล็กหล่อ
 - ง) แผ่นฟอยล์อลูมิเนียม
 - จ) ฝาปิดและเครื่องเคลือบ
 - ฉ) มีด ส้อม ช้อน
 - ช) จานทำจากเหล็ก สแตนเลส เหล็กหล่อ และอลูมิเนียม
 - ซ) หม้อหรือกระทะที่ว่างเปล่า ไม่มีอาหาร
4. (ภาพที่ 9) ในขณะที่เครื่องกำลังทำงานโดยมีหม้อหรือกระทะอยู่ด้านบน อย่ายกหรือเคลื่อนย้ายเครื่อง
5. (ภาพที่ 10) จัดให้มีการระบายอากาศรอบเครื่อง จะช่วยป้องกันการเกิดความร้อนสูงและช่วยให้เครื่องทำงานได้ดี
6. (ภาพที่ 11) อย่าทิ้งวัตถุประเภทเหล็กลงไปในช่องระบายอากาศ วัตถุประเภทเหล็ก เช่น เข็ม ลวด และเหล็ก ในแบบต่างๆ
7. (ภาพที่ 12) การดูแลรักษาแผ่นหน้าเตา
 - ก) อย่าทิ้งวัตถุมีน้ำหนักบนแผ่นหน้าเตา
 - ข) อย่าเทน้ำ กรด หรือของเหลวลงบนแผ่นหน้าเตา
 - ค) อย่าเผาไฟบนเตา
 - ง) อย่าวางหม้อหรือกระทะร้อนด้านบน ในขณะที่เครื่องไม่ทำงาน
 - จ) ในกรณีที่แผ่นด้านบนมีรอยแตก ปิดเครื่องและอย่าใช้งานต่อ ให้ส่งเครื่องเข้าซ่อม
 - ฉ) หม้อบางชนิดทำให้เกิดเสียงในขณะใช้งาน ให้ทำการเคลื่อนย้ายเล็กน้อย เสียงอาจหายไปหรือลดลง หากเสียงยังคงอยู่ ให้เปลี่ยนหม้อ
8. (ภาพที่ 13) อย่าวางเครื่องบนพรม ผ้าหรือกระดาษ ในขณะที่เครื่องกำลังทำงาน เพื่อป้องกันการลุกไหม้
9. (ภาพที่ 14) คำเตือน! อย่าสัมผัสแผ่นด้านบนหลังใช้งาน ตัวทำความร้อนเซรามิกไฟฟ้ายังร้อนจัด ถึงแม้จะปิดเครื่อง
10. (ภาพที่ 15) อย่าถอดปลั๊กโดยการดึงสายไฟ
11. (ภาพที่ 16) ปิดเครื่องก่อนการถอดปลั๊ก หากไม่ได้ใช้งานเป็นเวลานาน ให้ถอดปลั๊กเสมอ
12. ไม่วางกระทะหรือหม้อบนเครื่องหลังการใช้งาน

ปัญหา	สาเหตุที่อาจเป็นไปได้และแนวทางแก้ไข
▲ ไฟไม่เข้า	ตรวจสอบสวิตช์ เปิด/ปิด ตรวจสอบฟิวส์
▲ เครื่องทำงานอยู่แล้วดับ หน้าจอ LED แสดง E1	ตรวจสอบว่าหม้อ/กระทะวางบนกึ่งกลางแผ่นด้านบนหรือไม่ ตรวจสอบสถานะให้เหมาะสมกับการใช้งาน (ดูหน้าที่ 1) ตรวจสอบว่าหม้อ/กระทะวางบนขาหม้อของแผ่นด้านบนหรือไม่
▲ เครื่องหยุดการทำงาน หน้าจอ LED แสดง E5	เซ็นเซอร์จับอุณหภูมิไม่ทำงาน กรุณาส่งซ่อม
▲ เครื่องทำงานอยู่แล้วดับ หน้าจอ LED แสดง E6	ตรวจสอบว่าหม้อ/กระทะวางบนขาหม้อของแผ่นด้านบนหรือไม่ ตรวจสอบหม้อ/กระทะว่ามีน้ำในขณะต้มจุบหรือโจ๊กหรือไม่
▲ เครื่องทำงานอยู่แล้วดับ หน้าจอ LED แสดง E2	ตรวจสอบการระบายอากาศการอุดตันหรือไม่ (ดูหน้าที่ 7) ให้ปิดเครื่องเป็นเวลา 5 นาที และเปิดใหม่อีกครั้ง หากหน้าจอยังคงแสดง E2 กรุณาส่งซ่อม
▲ เครื่องหยุดการทำงาน หน้าจอ LED แสดง E4	ตรวจสอบแหล่งจ่ายไฟหลัก ไฟอาจต่ำมาก ไม่ควรต่ำกว่า 100 โวลต์
▲ เครื่องหยุดการทำงาน หน้าจอ LED แสดง E3	ตรวจสอบแหล่งจ่ายไฟหลัก ไฟอาจสูงมาก ไม่ควรสูงเกิน 275 โวลต์
▲ เครื่องอยู่ในสภาพใช้งานได้ แต่ ไม่สามารถควบคุมตัวปรับอุณหภูมิ	ตรวจสอบว่าหม้อ/กระทะมีก้นแบนหรือไม่ ใช้หม้อ/กระทะก้นแบนเพื่อการส่งผ่านความร้อนที่ดียิ่งขึ้น
▲ เครื่องอยู่ในสภาพใช้งานได้ แต่น้ำไม่เดือด	ตรวจสอบปริมาณน้ำ ควรเกิน 1 ลิตร และน้อยกว่า 4 ลิตร ตรวจสอบสถานะให้เหมาะสมกับการใช้งาน (ดูหน้าที่ 1) อุณหภูมิห้องไม่ควรต่ำกว่า 5 องศาเซลเซียส
▲ เครื่องทำความร้อน แต่หยุดในช่วงกำลังไฟต่ำ	ตัวอย่าง ตั้งเครื่องไว้ที่ 80 วัตต์ เครื่องทำความร้อนที่ 80 วัตต์และหยุด หากความร้อนต่ำกว่า 80 วัตต์ เครื่องจะทำงานและทำความร้อนที่ 80 อีกครั้ง เครื่องได้รับการออกแบบให้ทำงานในลักษณะเช่นนี้
▲ หลอดนิชีแสดงรหัส "EF"	พัดลมทำความเย็นของตัวทำความร้อนเซรามิกไฟฟ้าเกิดความเสียหาย เนื่องจากข้อจำกัดภายใน กรุณาตรวจสอบถึงสามนาฬิกาให้เปิดเครื่องใหม่อีกครั้ง หากยังคงแสดงอยู่ กรุณาส่งซ่อม

ซ่อมแซมโดยช่างผู้ชำนาญเท่านั้นและไม่เปิดฝาคอร์อบโดยผู้ไม่ชำนาญ

ภาพวาดขนาดเตาอัจฉริยะแบบฝัง :

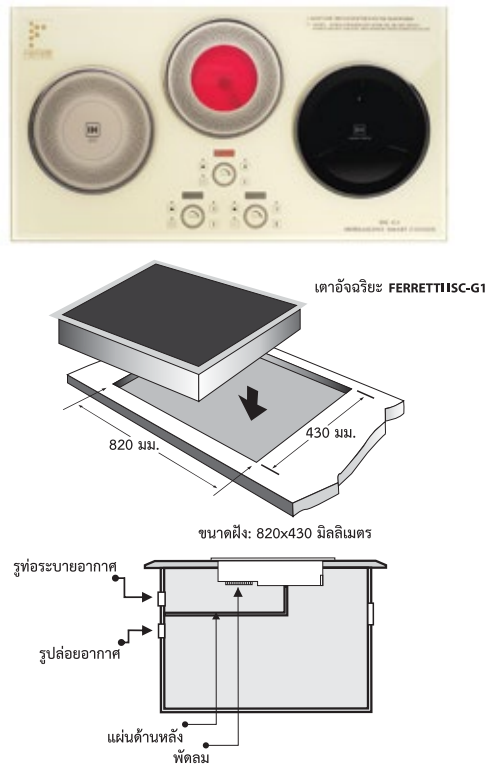

Name : FERRETTI INDUCTION HOB BUILT-IN MODEL : ISC-G1

ผลิตภัณฑ์ :เตาแม่เหล็กไฟฟ้าอัจฉริยะ FERRETTI แบบฝัง รุ่น ISC-G1



คุณสมบัติ

- ฐานกระจกเซรามิก คุณภาพสูง
- แผงควบคุมระบบสัมผัส แบบดิจิทัล มีระบบล็อคแผงควบคุมเพื่อความปลอดภัย
- 3 หัวเตา
- มีไฟสัญญาณการทำงาน
- มีไฟสัญญาณเตือนความร้อนคงเหลือ


ข้อมูลทางเทคนิค

- ขนาดกว้าง * ยาว * ลึก 840*450*93 มิลลิเมตร
- ขนาดเจาะเฟอร์นิเจอร์กว้าง * ยาว * ลึก 820*430*93 มิลลิเมตร
- อัตราการกินไฟสูงสุด 3,400 วัตต์
- แรงดันไฟฟ้า 220 โวลต์ 50 เฮิร์ตซ์
- น้ำหนัก 12.5 กิโลกรัม


Names of all parts and keys on the control panel:

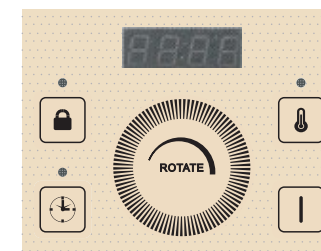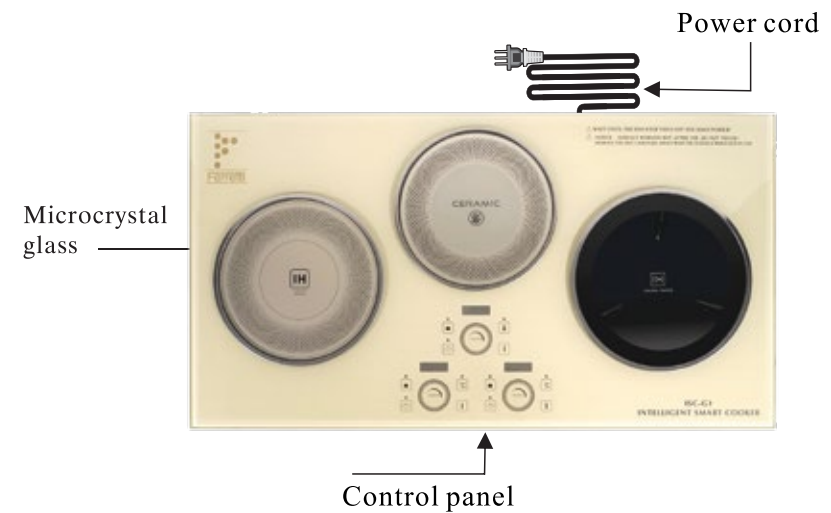

Electric ceramic

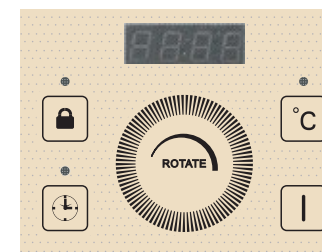

Left stove

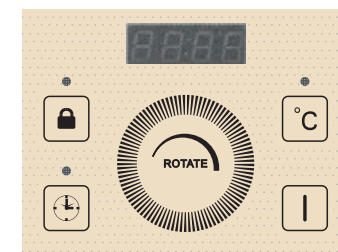

Right stove

Introduction:

1. The total power of the left stove, right stove and the middle electric ceramic heater is 3400W.
2. When left stove and right stove are both in working condition, the electric ceramic heater will auto cut-off. The total power of left and right stove is 3400W.
3. When left stove and the electric ceramic heater are both in working condition, the right stove will auto cut-off. The adjustable power of left stove is from 100W to 2000W, or adjustable temperature from 80°C to 240°C. At the same time, the adjustable power of the electric ceramic heater is from 100W to 1400W. The maximum power of left stove and the electric ceramic heater is 3400W.
4. When right stove and the electric ceramic heater are both in working condition, the left stove will auto cut-off. The adjustable power of right stove is from 100W to 2000W, or adjustable temperature from 80°C to 240°C. At the same time, the adjustable power of the electric ceramic heater is from 100W to 1400W. The maximum power of right stove and the electric ceramic heater is 3400W.

Remarks: Only allow to use two stove of the trio induction cooker at the same time (total power can't be exceed 3400W).

Suitable cookware:

- 1: Cookware with magnetic bottom, stainless steel with iron bottom, iron/cast iron and enamel.
- 2: Flat bottom cookware with a diameter of 12 to 26cm.
- 3: The maximum weight of cookware with food is 6kg.

Functions on control panel:

Select appropriate function key after plug in, you are able to adjust the power, temperature and time by sliding the rotating wheel control.



Press the “ON/OFF” button for 1 second after plug in, the buzzer produces Bi sound, and the digital display “00” (automatic exit without operation within 1 minute), press the selected function key into heating.



Press the “ON/OFF” button for 1 second after plug in, the buzzer produces Bi sound, and the digital display “00” (automatic exit without operation within 1 minute). Press this key, the temperature indicator will light-up, the digital display “180°C”, and be into the fixed temperature heating mode. Slide the rotating wheel control from 80°C to 240°C clockwise to adjust the temperature, and adjust the temperature from 240°C to 80°C counterclockwise. Press this key again, the digital display power “1200”, then, slide the rotating wheel control clockwise to adjust the power from 100W to 2000W, counterclockwise to adjust the power from 2000W to 100W. This key can be switched to the fixed temperature mode for heating under the power mode.



Press this key during heating, the timer indicator will light-up, and the digital display “0:00”. Then, it can slide the rotating wheel control to adjust the timer from 1 minute to 8 hours. Clockwise is for increasing the period of time (from 1 to 59 minutes, each adjustment will increase 1 minute, from 1 to 8 hours, each adjustment will increase 10 minutes); Counterclockwise is for decreasing the period of time (from 1 minutes to 1 hour, each adjustment will decrease 1 minute, from 1 to 8 hours, each adjustment will decrease 10 minutes; when digital display “00:00”, adjustment of counterclockwise will decrease from 8 hours).




Press this key for 2 second after plug in, the child lock indicator will light-up, and be into the child lock mode. Under the child lock working condition, press the lock key for 2 second to unlock. It can only shut off under the child lock working condition; if you want to use other functions, please unlock it.



Press the “ON/OFF” button for 1 second after plug in, the buzzer produces Bi sound, and the digital display “00” (automatic exit without operation within 1 minute). Press this key, the indicator will light up, the digital display “PC”, and be into keep warm mode for heating. Press this key again, the digital display “800”, then, slide the rotating wheel control from 100W to 1400W clockwise to adjust the power, and adjust the power from 1400W to 100W counterclockwise. This key can be switched to the keep warm mode for heating under the power mode.

Tips: When the digital display “:”, the machine is energized; under the power off state, digital display “H”, this time the temperature of the machine surface is higher than 70 °C, please do not touch, and carefully burns.

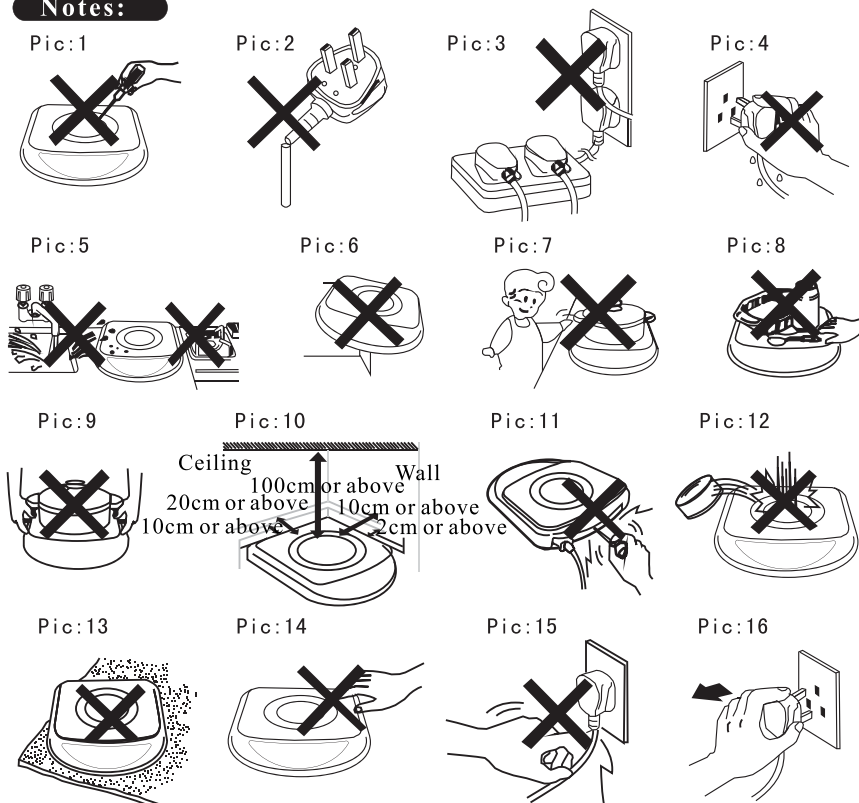Notes:**BEFORE USE:**

Please pay attention to the following instructions before use.

- 1: Please use the standard main power supply socket, and regularly check with the socket to prevent any damage.
- 2: (PIC: 1) Do not open the machine by yourself or any unqualified person. Only repair the machine by its service agent or similarly qualified technician.
- 3: (PIC: 2) Please check with the power cord and plug. If the power cord or plug is damaged, please do not use the machine. Do not pull out the plug with wet hand.
- 4: (PIC: 3) Do not use the extension power cord, and please use the main power supply socket only.
- 5: (PIC: 4) If the machine is not in use for a long period of time, please turn on the machine to stabilize the electronic component for 10 minutes first. Then, you can start to operate the machine.
- 6: (PIC: 5) Do not use the machine near water, fire or damp area. The machine is intended to use in indoor household ONLY.

DURING USAGE:


Please pay attention to the following instruction to prevent ignition and accidents.

- 1: (PIC: 6) Please place the machine on flat and solid surface ONLY.
- 2: (PIC: 7) Children should be supervised to ensure that they do not play with the machine.
- 3: (PIC: 8) Do not place any following objects on the panel when the machine is in working condition.
 - a) Stainless steel
 - b) Iron
 - c) Cast iron
 - d) Aluminum
 - e) Lid and enamel
 - f) Knife, fork or spoon
 - g) Plate is made of iron, stainless steel, cast iron or aluminum
 - h) Empty cookware
- 4: (PIC: 9) Do not carry or move the machine with cookware on top during heating.
- 5: (PIC: 10) Please maintain a good surrounding environment for ventilation during heating.
- 6: (PIC: 11) Do not insert any wire or metal objects into the air inlet or venting outlet of the machine.
- 7: (PIC: 12) How to take care of the panel
 - a) Do not drop any heavy objects to the panel.
 - b) Do not pour water, acid or any liquid to the panel.
 - c) Do not burn anything with fire on the panel
 - d) Do not place any hot cookware on top when the machine is not in use.
 - e) If the surface (panel) is cracked, turn off the machine immediately to avoid electric shock, and send it for repair.
 - f) Some of the cookware may generate a noise during use. Please slightly move the cookware, and the noise may disappear or reduce. If not, please change the cookware.
- 8: (PIC: 13) Do not place the machine on carpet, cloth or paper material when the machine is in working condition.
- 9: (PIC: 14) Do not touch the panel after used. The electric ceramic heater is still burning hot even the power is switch off.
- 10: (PIC: 15) Do not unplug the machine by pulling the cable.
- 11: (PIC: 16) Please turn off the machine before unplug. Please unplug the power cord when the machine is not going to use for long period of time.
- 12: Keep the cookware away from the machine after use.

Problem	Possible Cause and Remedy.
▲ No Power	Check main power ON/OFF switch. Check fuse.
▲ Machine stop function half-way,LED display show-E1	Check pot/pan at center of the top plate. Check cookware suitable for machine usage(ref page 1). Check pot/pan place on the right side of top plate.
▲ Machine stop function LED display show E5	The machine temperature sensor is not functioning. Please send for service.
▲ Machine stop function half-way,LED display show-E6	Check pot/pan place on the right side of top plate . Check pot/pan any water while boiling congee or soup .
▲ Machine stop function half-way,LED display show-E2	Check machine ventilation any blockage(ref page 7). Turn OFF machine for 5 minutes and restart again. If,E2 still on display,send the machine for service.
▲ Machine stop function LED display show E4	Check main power supply, it may be too low, and it should not be lower than AC 100V .
▲ Machine stop function LED display show E3	Check main power supply, it may be too high, and it should not be higher than AC 275V.
▲ Machine is in working condition, but it cannot control the temperature of Selector	Check with the pot/pan whether the bottom is flat or not.Use flat bottom for better heat transferring.
▲ Machine is in working condition, but the water cannot be boiled.	Check with the water capacity, it should be more than 1L and less than 4L.Check with the cookware if it is suitable to use for the machine (ref. page 1). Room temperature should not below 5 °C .
▲ Machine is heating and stop under Low power	For example, if you set the power as 80W, the machine will produce 80W heat and stop operating, and once the heat is below 80W, the machine will operate again to maintain the heat in 80W.
▲ Nixie tube is display "EF" code	The cooling fan of the electric ceramic heater is damaged, internal exception, restart the cooker after few minutes later. If it still displays, which must be sent to the service station for repair.

Only repair the machine by its service agent or similarly qualified technician.

Induction Cooker inlay dimensional drawing :

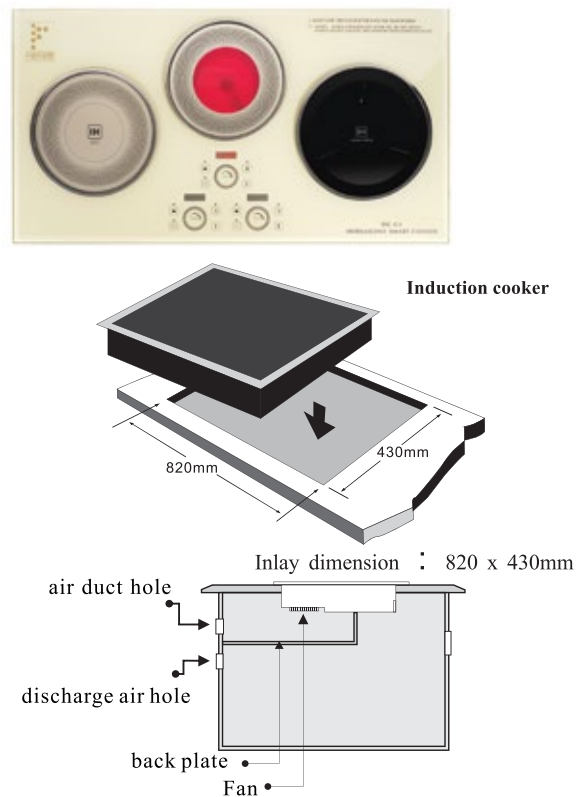

Name : FERRETTI INDUCTION HOB BUILT-IN MODEL : ISC-G1
Product : FERRETTI INTELLIGENT SMART COOKER MODEL : ISC-G1

Specification :

High quality of Microcrystal glass with Ceramic base
Digital Touch Screen Control Panel and Security Panel Lock System
Induction 3 HOBS
Indicator light up while using device
Indicator light up for heating level while using device

Technical Information

Outer dimension 840*450*93mm
Inlay dimension space 820*430*93mm
Rated power 3,400W
Rated voltage 220V50Hz
Weight 12.5kg